

TOTO LINK

The Smartest Network Device

Quick Installation Guide

4G LTE Router

Model: LR350

Copyrights © TOTOLINK. All Rights Reserved. <http://www.totolink.net>
Information in this document is subject to change without prior notice

1 Installation Diagram


Method 1: Wireless Connection to the Internet(with SIM card)

1. Insert the SIM card into the slot.
2. Power on the router.
3. Find the default Wi-Fi name on your Phone and choose to connect. Now, you could enjoy Wi-Fi.

4. For security, please follow the below instructions to create passwords for your router and Wi-Fi.
Note: Micro or Nano card must be turned into the SIM card by using the standard SIM card adapter.


Method 2: Wired Connection to the Internet(with Cable)

Default Wi-Fi Name: TOTOLINK_LR350

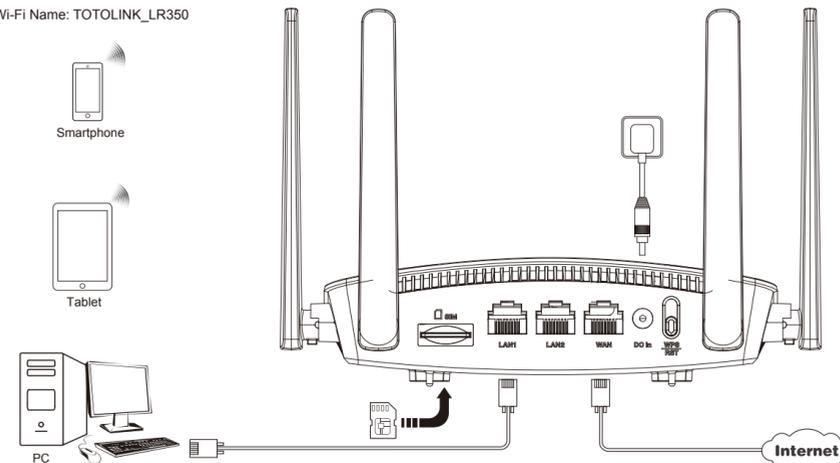


2 Configure the Router on Phone

- 4 Time Zone setting. According to your location, please click the Time Zone to choose a correct one from the list, then click **Next**. (P4)
- 5 Internet Setting. Choose a suitable connection type from the list and fill in the information required, then click **Next**.(P5/P6)
- 6 Wireless Setting. Create passwords for 2.4G and 5G Wi-Fi (Here users could also revise the default Wi-Fi name) and then click **Next**.(P7)
- 7 For security, please create a new Login Password for your router, then click **Next**.(P8)
- 8 The coming page is the Summary information for your setting. Please remember your Wi-Fi Name and Password, then click **Done**.(P9)

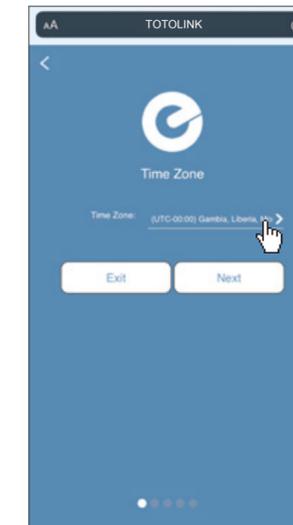


(P4)

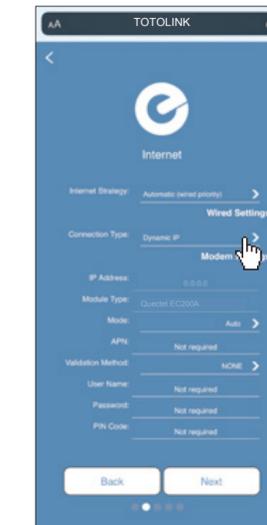


(P5)



(P7)

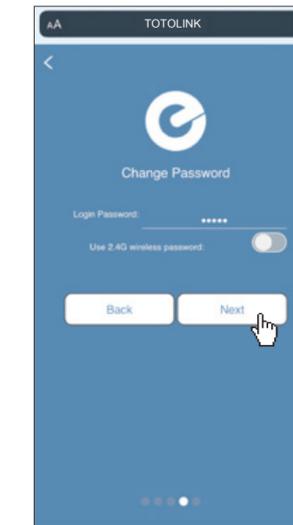

(P8)

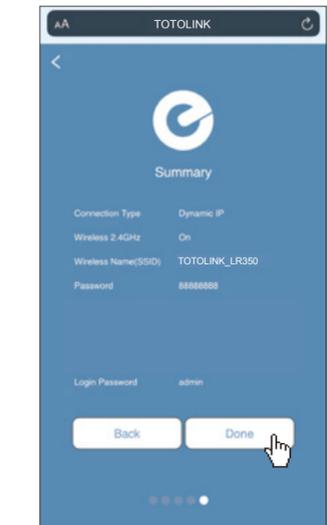


(P9)

Indicators, Ports, Buttons


Indicator/Port/Button	Description
SYS - Green light is always on	The equipment is powered on.
SYS - Green Blinking (1s: 1s=On: Off)	Press the WPS button, the WPS function is awakened.
SYS - Green Blinking (100ms: 100ms=On: Off)	The 4G connection is successful. And the signal is strong.
SYS - Orange Blinking (1s: 1s=On: Off)	Press the reset button for 5seconds. Router is being reset, ready to reboot.
SYS - Red light is always on	The 4G connection is successful. And the signal is average.
SYS - Red Blinking (1s: 1s=On: Off)	SIM card is detected, no 4G connection.
SYS - Red Blinking (1s: 1s=On: Off)	No SIM card is inserted or detected.
DC In	Connect the power adapter.
WAN Port	Connect to the Internet.
LAN 1/2 Ports	Connect to PCs.
SIM Slot	Insert the SIM card.
WPS/RST Button	Activate WPS function: when the router is powered on, press and hold the button for 1 second, the System indicator keeps solid on for 2 minutes. Reset to factory defaults: when the router is powered on, press and hold this button for 5 seconds or more until the System indicator blinks quickly.

2 Configure the Router on Phone

- 1 Activate the WLAN function on your Phone and connect to **TOTOLINK_LR350**. Then run any Web browser and enter <http://totolink.net> in the address bar. (P1)
- 2 Enter **admin** for the password and then click **LOGIN**.(P2)
- 3 Click **Quick Setup** on this page, then enter the setting interface. (P3)

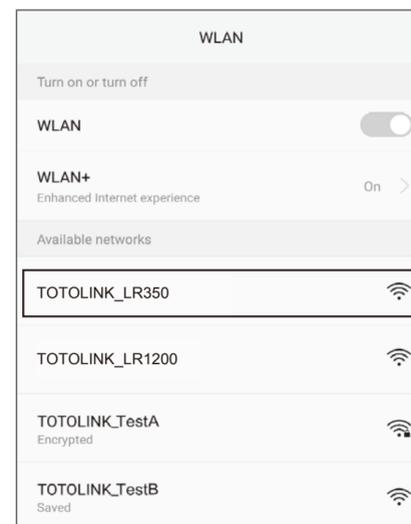

(P1)

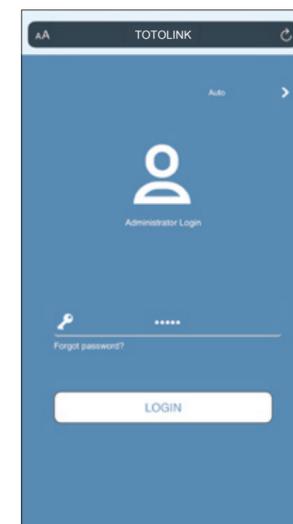


(P2)



(P3)

- 9 It takes several seconds to save the settings and then your router will restart automatically. This time your Phone will be disconnected from the router. Please back to the WLAN list of your phone to choose the new Wi-Fi name and input the correct password. Now, you could enjoy the Wi-Fi.(P10)

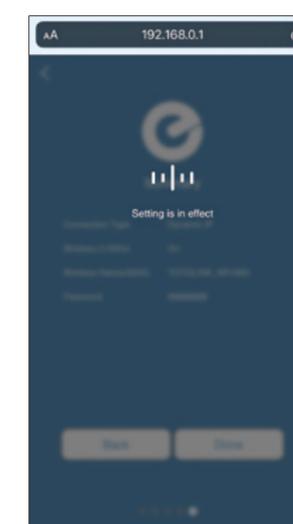

(P10)

Connection Type	Description
Static IP	Input the IP address, Subnet Mask, Default Gateway, DNS from your ISP.
Dynamic IP	No information required. Please confirm with your ISP if Dynamic IP is supported.
PPPoE	Input User Name and Password from your ISP.

(P6)

3 FAQs (Frequently Asked Questions)

- 1.Unable to open the router's login page on the browser?**
Please check if your Phone has connected to the router and make sure you have entered the correct default gateway <http://totolink.net>
- 2.After the SIM card is plugged in, the SYS LED on Red Blinking, the Internet cannot be accessed.**
In this case, the SIM card is not inserted properly. The solution is to power off the 4G router and re-insert the card. Because the card slot is deep and the fingernails are short, it is recommended to insert the card together with toothpicks; the other case is SIM If the card is not activated, you must insert the card after activation according to the instructions of the card manual.
- 3. After the SIM card is plugged in, the SYS LED on Red light is always on, the Internet cannot be accessed.**
First use the mobile phone card to plug in the router to confirm whether it can be used. If the mobile phone card can be used normally, then ask the 4G SIM card provider if there is any traffic, whether the real-name authentication is verified and whether the card is locked.
- 4. After the card is used, the mobile phone is connected to Wi-Fi, and the network speed is slow.**
This situation is related to the card signal. Where the signal is poor, the corresponding Wi-Fi is not ideal. To debug the routing position, place it in a place with strong signal.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Manufacturer: ZIONCOM ELECTRONICS (SHENZHEN) LTD.
Address: Room 702, Unit D, 4 Building Shenzhen Software Industry Base, Xuefu Road, Nanshan District, Shenzhen, Guangdong, China